

Technical Support
Knowledge Center Open

National Instrument 사의 GPIB 카드와 VEE는 어떻게 사용합니 까?

Notices

© Keysight Technologies Incorporated, 2002-2020

1400 Fountaingrove Pkwy., Santa Rosa, CA 95403-1738, United States All rights reserved.

No part of this documentation may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause.

Use, duplication or disclosure of Software is subject to Keysight Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Portions of this software are licensed by third parties including open source terms and conditions.

For detail information on third party licenses, see [Notice](#).

Contents

National Instrument 사의 GPIB카드와 VEE는 어떻게 사용합니까?

1. 먼저 NI사의 S/W와 H/W를 설치한다.
2. NI GPIB 카드를 NI 사의 유틸리티를 사용하여 컨피규레이션 합니다.
3. NI사의 시험 유틸리티를 수행하여, GPIB 0 번이 컨피규레이션되고 디바이스 테스트를 통과 하는지 확인합니다.
4. VEE의 Instrument Manager박스를 이용해 GPIB 아래의 디바이스를 생성하고 주소를 14xx를 부여합니다.(NI 사의 GPIB 카드 어드레스는 14xx는 GPIB 0, 15xx는 GPIB 15를 나타냅니다.)

하지만, 현재 애질런트 I/O 라이브러리(K01.01)이상을 NI사 드라이버 설치후 다시 설치하면 애질런트 환경의 VISA라이브러리를 그대로 사용하 실 수 있습니다.

