

Technical Support
Knowledge Center Open

Requirements for Remote Programming with SCPI Commands

Notices

© Keysight Technologies Incorporated, 2002-2020

1400 Fountaingrove Pkwy., Santa Rosa, CA 95403-1738, United States All rights reserved.

No part of this documentation may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause.

Use, duplication or disclosure of Software is subject to Keysight Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Portions of this software are licensed by third parties including open source terms and conditions.

For detail information on third party licenses, see [Notice](#).

Contents

When you are working with SCPI commands, you need to use a CALL Interface.

This call interface transmits SCPI commands to the firmware server and makes sure, that every command is performed at the right time.

If you are not using the CALL Interface, the SCPI strings are fired direct to the firmware server.

Those strings are coming too fast and uncontrolled for the firmware server. He is not able to handle this fast string sequence and as a result, the firmware server is crashing. The call interface is controlling the program sequence.

This CALL Interface consists of hp81200.dll and hp81200.h and must be included into your program.

You will find the files for the call interface in following directory:

c:\hp81200\DSR\

..C for C++programming

..VB for Visual Basic programming

..VEE for HPVEE programming

Attached is a file for HPVEE who describes exactly this process of including a CALL Interface on page 6.

