Technical Support Knowledge Center Open

VEE:我要如何從VEE來執行

IEEE-488的傳遞控制?



Generated on: Apr 12, 2021

Notices

© Keysight Technologies Incorporated, 2002-2020

1400 Fountaingrove Pkwy., Santa Rosa, CA 95403-1738, United States All rights reserved.

No part of this documentation may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause.

Use, duplication or disclosure of Software is subject to Keysight Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Portions of this software are licensed by third parties including open source terms and conditions.

For detail information on third party licenses, see Notice.

VEE:我要如何從VEE來執行IEEE-488的傳遞控制?

Contents

VEE: 我要如何從VEE來執行IEEE-488的傳遞控制?

| Start |

附註本項討論假設VEE在系統控制器上執行。

請注意,以上僅適用於使用82341卡的VEEWIN,但不適用於使用82335卡的VEEWIN,因為它無法主張IFC。

Revision 1.0 December 23 1999 AJF

