

Technical Support
Knowledge Center Open

**VEE：為什麼HP VEE無法與我的
串列埠上的儀器或裝置交談？**

Notices

© Keysight Technologies Incorporated, 2002-2020

1400 Fountaingrove Pkwy., Santa Rosa, CA 95403-1738, United States All rights reserved.

No part of this documentation may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause.

Use, duplication or disclosure of Software is subject to Keysight Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Portions of this software are licensed by third parties including open source terms and conditions.

For detail information on third party licenses, see [Notice](#).

Contents

VEE：為什麼HP VEE無法與我的串列埠上的儀器或裝置交談？

使用Windows的Hyperterminal來連接裝置及進行通訊

HP VEE使用與Hyperterminal相同的API呼叫來進行通訊。

從Programs功能表底下的HP I/O程式庫群組中執行I/O Config

HP VEE使用標準儀器控制程式庫（SICL）來與儀器通訊。

在HP VEE儀器管理員底下設定一個串列裝置。

